



A4 Sign holder

Product code: Sign01

Overview

The sign holder is designed exclusively for use with the Skipper unit. Its functional design makes it a great complement to the Skipper product range and allows you to easily display warnings, promotional messages and directions. Simply insert your message into the polycarbonate sleeve, and slide into the robust u-shaped frame. The sign holder then simply attaches to any Skipper or Skipper XS unit.

Key selling points

- Perfect for displaying your warnings, promotions and messages
- Very easy to insert or replace messages and signs

Key features

- Made from robust materials for use in outdoor environments
- Supplied with everything you need to attach to a Skipper unit or a Skipper XS unit

Product FAQs

- Q. What size paper should I print for use with the Sign holder?**
A. The sign holder is designed to accommodate the standard A4 paper size
- Q. How do I attach the sign holder to the Skipper unit?**
A. Each sign holder is supplied with a special top cap, which replaces the one on your current Skipper unit (simply twist anti clockwise to remove). Attach the sign holder to its top cap using the provided screw and washer, then twist onto the Skipper unit. Instructions are provided



Product Specifications

Width: 266mm **Height:** 348mm
Depth: 28mm **Weight:** 480g

The sign holder is supplied with its own top cap and fixings, which allow it to fit onto the Skipper or Skipper XS units



Product and packaging