





32 TONE STAGE SOUNDER

Stock Nos: 223 1391, 223 1408, 237 8872, 237 8888

DC VERSION

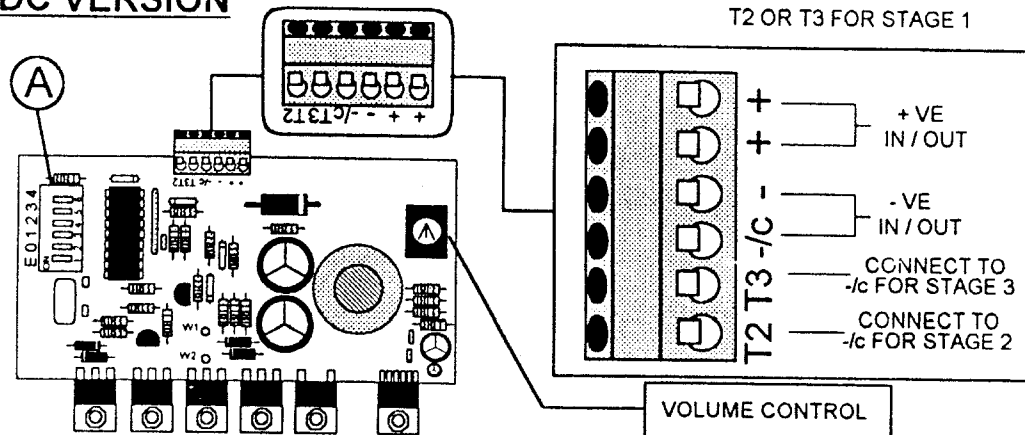

AC VERSION:

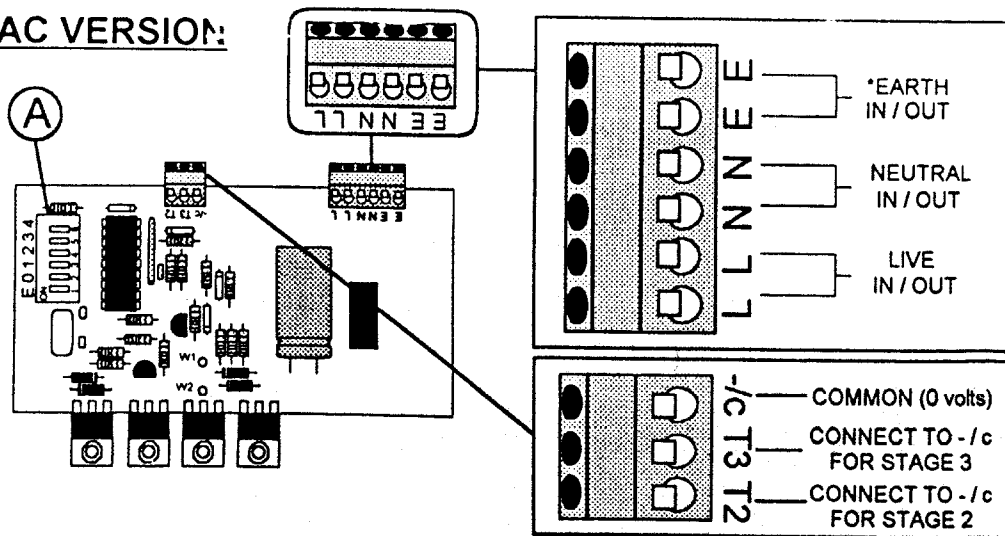


DIP SWITCH



Switch E (Switch 1) is used to ENABLE the sounder when set to the 'ON' position. The sounder is DISABLED when Switch E (Switch 1) is set to the 'OFF' position. Switch E (Switch 1) is normally 'ON'

TONE SELECTION EXAMPLE

 The DIP switch is set for Tone 19 with the Sounder ENABLED (Sounder 'ON').



TONE AND FREQUENCY SELECTION		DIP SWITCH SETTINGS					STAGE SELECTION	
STAGE 1	FREQUENCY DESCRIPTION	2	3	4	5	6	STAGE 2	STAGE 3
TONE 1	Continuous at 340Hz	0	0	0	0	0	Tone 2	Tone 5
TONE 2	Alternating 800 / 1000Hz at 0.25 second intervals	1	0	0	0	0	Tone 17	Tone 5
TONE 3	Slow whoop 500 / 1200Hz at 0.3Hz with 0.5 second gap - repeated	0	1	0	0	0	Tone 2	Tone 5
TONE 4	Sweeping 800 / 1000Hz at 1Hz sweep	1	1	0	0	0	Tone 6	Tone 5
TONE 5	Continuous at 2400Hz	0	0	1	0	0	Tone 3	Tone 20
TONE 6	Sweeping 2400 / 2900Hz at 7Hz	1	0	1	0	0	Tone 7	Tone 5
TONE 7	Sweeping 2400 / 2900Hz at 1Hz	0	1	1	0	0	Tone 10	Tone 5
TONE 8	Siren 500 / 1200 / 500Hz at 0.3Hz	1	1	1	0	0	Tone 2	Tone 5
TONE 9	Sawtooth 1200 / 500Hz at 1Hz	0	0	0	1	0	Tone 15	Tone 2
TONE 10	Alternating 2400 / 2900Hz at 2Hz	1	0	0	1	0	Tone 7	Tone 5
TONE 11	Intermittent 1000Hz at 1Hz	0	1	0	1	0	Tone 2	Tone 5
TONE 12	Alternating 800 / 1000Hz at 0.875Hz	1	1	0	1	0	Tone 4	Tone 5
TONE 13	Intermittent 2400Hz at 1Hz	0	0	1	1	0	Tone 15	Tone 5
TONE 14	Intermittent 800Hz - 0.25 seconds on, 1 second off	1	0	1	1	0	Tone 4	Tone 5
TONE 15	Continuous at 800Hz	0	1	1	1	0	Tone 2	Tone 5
TONE 16	Intermittent 660Hz - 150ms on, 150ms off	1	1	1	1	0	Tone 18	Tone 5
TONE 17	Alternating 544Hz (100ms) / 440Hz (400ms) - [NF S 32-001]	0	0	0	0	1	Tone 2	Tone 27
TONE 18	Intermittent 660Hz - 1.8 seconds on, 1.8 seconds off	1	0	0	0	1	Tone 2	Tone 5
TONE 19	1400Hz to 1600Hz sweep up over 1 second 1600Hz to 1400Hz sweep down over 0.5 seconds - [NF C 48-265]	0	1	0	0	1	Tone 2	Tone 5
TONE 20	Continuous at 660Hz	1	1	0	0	1	Tone 2	Tone 5
TONE 21	Alternating 554Hz / 440Hz at 1Hz	0	0	1	0	1	Tone 2	Tone 5
TONE 22	Intermittent 544Hz at 0.875 seconds	1	0	1	0	1	Tone 2	Tone 5
TONE 23	800Hz pulsing at 2Hz	0	1	1	0	1	Tone 6	Tone 5
TONE 24	Sweeping 800 / 1000Hz at 50Hz	1	1	1	0	1	Tone 29	Tone 5
TONE 25	Sweeping 2400 / 2900Hz at 50Hz	0	0	0	1	1	Tone 29	Tone 5
TONE 26	Simulated Bell Sound	1	0	0	1	1	Tone 2	Tone 15
TONE 27	Continuous 554Hz	0	1	0	1	1	Tone 26	Tone 5
TONE 28	Continuous 440Hz	1	1	0	1	1	Tone 2	Tone 5
TONE 29	Sweeping 800 / 1000Hz at 7Hz	0	0	1	1	1	Tone 7	Tone 5
TONE 30	Continuous 300Hz	1	0	1	1	1	Tone 2	Tone 5
TONE 31	Sweeping 660 / 1200Hz at 1Hz	0	1	1	1	1	Tone 26	Tone 5
TONE 32	Two tone chime	1	1	1	1	1	Tone 26	Tone 15

*EARTHING NOTE

FOR PRODUCT SAFETY IT IS NOT NECESSARY TO EARTH THE 230 VAC UNITS, HOWEVER IT IS PERMISSIBLE TO CONNECT AN EARTH WIRE TO THE EARTH TERMINALS PROVIDED.