


NEW

supply busbars, entry terminals "standard" distribution

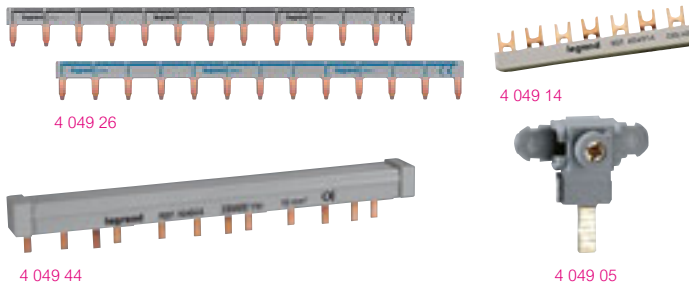

Pack	Cat.Nos	Prong-type supply busbars	
Universal single pole + neutral			
Reversible: blue for neutral, black for live			
		Length	Max. number of devices connected
20	4 049 26	1 row	13
10	4 049 37	Meter	57
Double pole			
50	4 049 38 ¹	1 row	6
10	4 049 39	Meter	28
Double pole balanced on 3 phases			
3	4 049 40 ¹	1 row	6
10	4 049 41	Meter	28
Triple pole			
40	4 049 42 ¹	1 row	4
10	4 049 43	Meter	19
Four pole			
30	4 049 44	1 row	3
10	4 049 45	Meter	14

Fork-type supply busbars			
Single pole			
		Length	Max. number of devices connected
20	4 049 11	1 row	12
10	4 049 12	Meter	57
Double pole			
10	4 049 14	Meter	28
Triple pole			
5	4 049 17	1 row	4
10	4 049 18	Meter	19
Four pole			
10	4 049 20	Meter	14

Protection			
Protection of prongs			
20	4 049 88	12 modules	Can be cut to length
Protection of supply busbar ends			
40	4 049 89	For single pole/single pole + neutral	
20	4 049 90	For double pole length 1 m and triple pole	
20	4 049 91	For four-pole	

Entry terminals			
20	4 049 05	For universal single pole + neutral or single pole supply busbars Cross section: 4 to 25 mm ² - IP 2X	
20	4 049 06	For all supply busbars Cross section: 6 to 35 mm ²	

1: Filled with end protection

supply busbars, entry terminals "standard" distribution


Technical characteristics

Busbars types	Max. number of devices connected	Length in number of 17.5 mm modules	Cross section (mm ²)	Permissible current: 1 central power supply point	2 power supply point
Single pole or Single pole + neutral	1 row	13	16 ²	80	100
	Meter	57			
Double pole	1 row	6	10 ²	63	90
	Meter	28			
Double pole balanced on 3-phases	1 row	6	10 ²	63	90
	Meter	28			
Triple pole	1 row	4	10 ²	63	90
	Meter	19			
Four pole	1 row	3	10 ²	63	90
	Meter	14			

Use of supply busbars


Universal single phase + neutral

- blue for neutral
- black for live

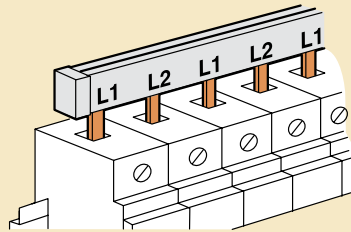


Entry terminal

Power supply at the rear of the busbar
For all devices with moving cage terminals

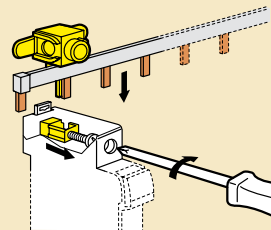

Power supply at the front of the busbar
For all devices with fixed cage terminals

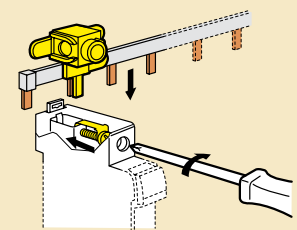

Four pole busbar

