
Power Supply Connectors For Industrial Equipment

PX Series

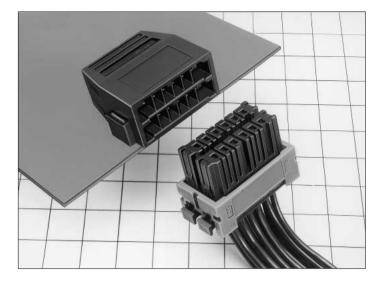

Features

1. Power supply connector for high-current

Withstands voltage of 2200V AC max. and 10A/contact (60A/6contacts) of rating current.

2. Housing design prevents incorrect insertion

Opening section is designed to prevent reverse insertion and mating direction is easily checked.

Additionally, the opening section is keyed to prevent misalignment of plugs in parallel applications.

3. Reduced Size

When compared to traditional products, Hirose's plug is smaller in size by 65% and the receptacle is smaller by 55%.

4. Reliable contact structure

(1)Three point contact


②Gold plated contacts (standard) with high-level environmental resistance

③Contact spring guard structure


④Structure prevents retainer deformation


5. Easy Cable Assembly

- ①Use of dedicated crimping tools will make harness work easier.One tool crimps both AWG#16 and AWG#18 wire.
- ②Positive lock can be felt on contact insertion.
- ③Release of contact lock can easily be performed with dedicated jig, which facilitates the wiring modification after assembly.

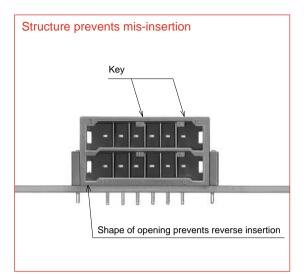

Reliable contact structure

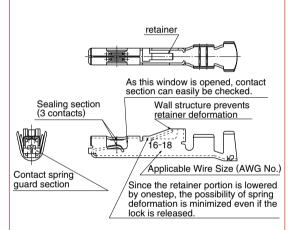

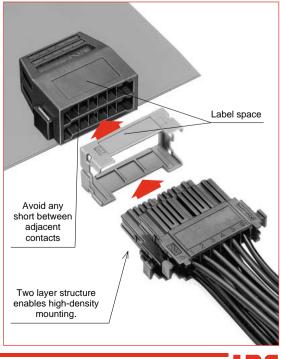

Product Specifications

	Operating temperature range	-55℃~+105℃	
Ratings	Voltage rating	600V AC	
	Current rating	10A	

Description	Specifications	Requirements	
1.Contact resistance	10mΩ max.	100mA	
2.Insulation resistance	1000MΩ min.	500V DC	
3.Withstanding voltage	No flashover or insulation breakdown.	2200V AC / 1 minute.	
4.Durability	$\textcircled{1}$ Contact resistance : 20m Ω max. $\textcircled{2}$ No damage, cracks or looseness of parts	1000 cycles	
5.Vibration	①No electrical discontinuity of 10μ s or more. ②Contact resistance : $20m\Omega$ max.	Frequency:10 to 55Hz,single amplitude of 0.75mm, 2 hours,3axis	
6.Shock	③No damage, cracks or looseness of parts	Acceleration: 490m/s ² Duration: 11ms Test at sine half-wave, 3 axes, bi-directional three times, respectively.	
7.Temperature cycle	 Contact resistance : 20mΩ max. Insulation resistance : 1000MΩ min. No damage, cracks or looseness of parts 	Temperature : $-55 \rightarrow +5 \rightarrow +35 \rightarrow +85 \rightarrow +5 \rightarrow +35^{\circ}C$ Time : $30 \rightarrow 10 \rightarrow 15 \rightarrow 30 \rightarrow 10 \rightarrow 15$ Minutes 5 cycles	
8.Humidity	 Contact resistance : 20mΩ max. ②Insulation resistance : 1000MΩ min. ③No damage, cracks or looseness of parts 	96 hours at 40 $\pm2^\circ\!\!C$ and humidity of 90 \sim 95%	
9.Salt spray	①No corrosions	5% salt water for 48 hours	


Materials

Parts	Material	Finish
Contacts	Copper alloy	Gold plating
Insulator	PBT (UL94V-0)	
Metal fixture	Copper alloy	Tin reflow plating

Comparison In Size With Conventional Equivalent

			(mm)
		PX	A company-made
	Width	34.2	44.94
Plug	Height	7.0	7.15
	Depth	23.0	22.80
	Width	28.0	39.40
Receptacle	Height	14.8	18.47
	Depth	27.4	27.18

For volume ratio, plug is downsized to : nearly 65%; and receptacle : nearly 55%.

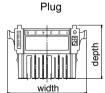











Receptacles

•6position/2row Type




Part No.	CL No.	RoHS
PX10-AF6WP(50)	236-0001-0-50	YES

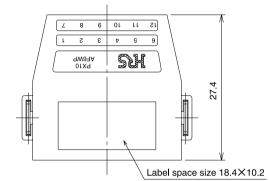


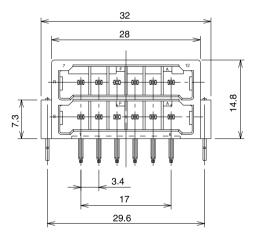


Dimensions For Circuit Board Installation(For your reference) t=1.6~2.4

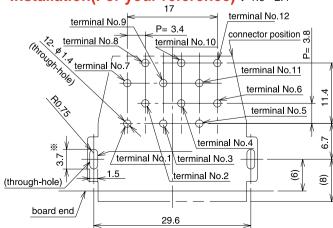

* Where t=1.6 (Setting value depends on thickness of boards.)

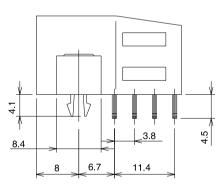


PCB mounting pattern

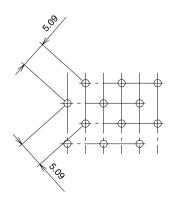


•4Position/2 Row Type




Part No.	CL No.	RoHS
PX10-AD4WP(50)	236-0005-0-50	YES

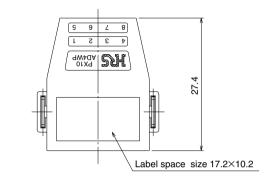


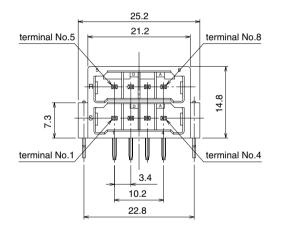


Dimensions For Circuit Board Installation(For your reference) t=1.6~2.4

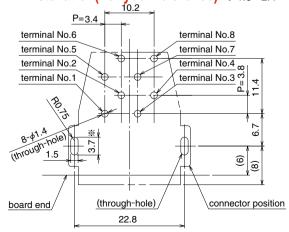

* Where t=1.6 (Setting value depends on thickness of boards.)

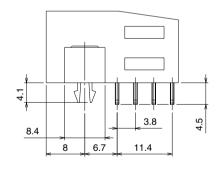

●PCB mounting pattern

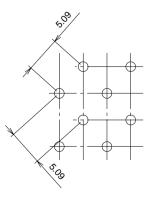


■Plug

•6-Position Type





Part No.	CL No.	RoHS
PX50-AF6S	236-0002-2	YES




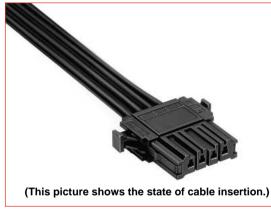


Part No.	CL No.	RoHS	
PX50-AD4S	236-0006-3	YES	

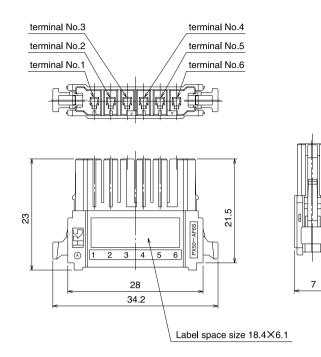

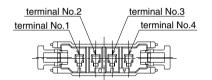

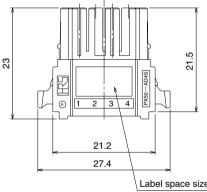


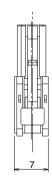


Label space size 11.6×6.1




Simple-Type Plug Holder Cover •For 6-Position Type

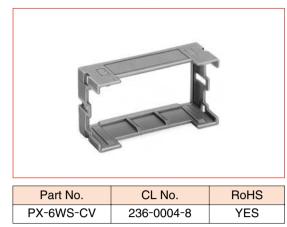

•For 4-Position Type

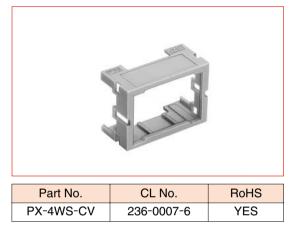


Installation status

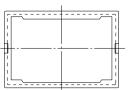






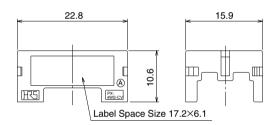

Installation method

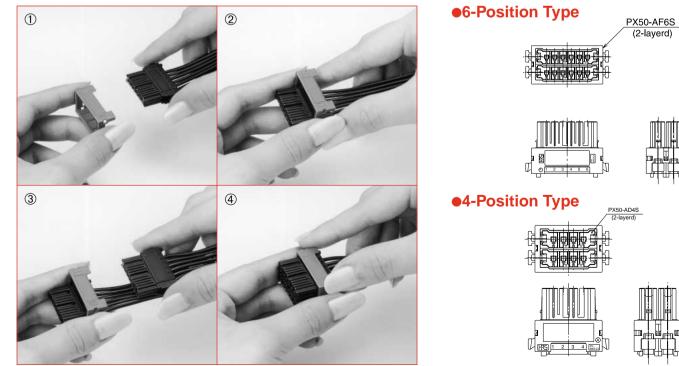

<Caution>The holder cover is not a rugged support fixture but only meant for alignment of the plugs. If external force is imposed by pulling of cables, etc. before mating, please bundle all cables together around the connector with union bands, etc.

The product information in this catalog is for reference only. Please request the Engineering Drawing for the most current and accurate design information.

All non-RoHS products have been discontinued, or will be discontinued soon. Please check the products status on the Hirose website RoHS search at www.hirose-connectors.com, or contact your Hirose sales representative.

Crimp contact


Applicable wire size	Packaging	Part No.	CL No.	Quantity	RoHS
40,40	Reel	PX50-SC-231	236-0003-5	5,000	YES
16, 18	Bag	PX50-SC-131	236-0008-9	200	TES

Please order by integral multiple of the packing volume.

Tools

Туре	Description	Part No.	CL No.	Applicable contacts	
Automotio	Press unit	CM-105	901-0005-4	PX50-SC-231	
Automatic	Applicator	AP105-PX50-3	901-2573-8		
Manual	Hand tool (*)	HT104/PX50-3	250-0229-4	PX50-SC-131	
Contact extraction tool		PX50-SC-TC	250-0233-1	PX50-SC-*31	

* For our manual crimping tools, we employ the rotate-replace procedure to use the crimper depending on wire size.

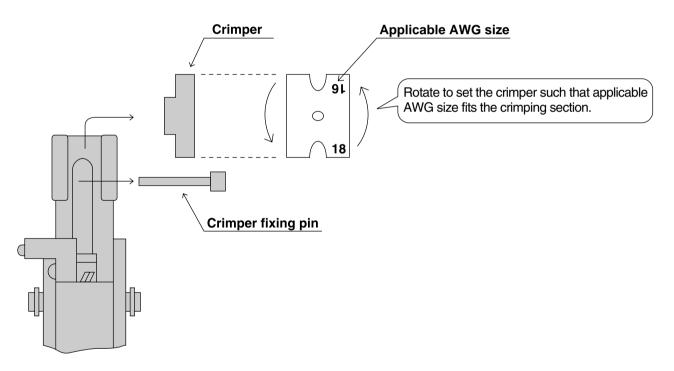

[Manual crimping tool : crimped section]

Note : Since manual crimping tool cannot provide fine adjustment of crimp height, please use the proper crimp height of auto crimper in crimping of the wires other than specified ones

Crimp Terminal Drawing Jig




Part No.	CL No.	RoHS
PX-50-SC-TC	250-0233-1	YES

PX50-SC-TC CL250-0233-1

<WARNING>

when the crimp terminal drawing jig is inserted and pushed from the fitting section of a connector as shown below, retainer lock of the terminal will be released. Then please extract the cable. If the retainer is too lowered after extracting terminal, put it in a former position and reinsert. Position and direction of the jig top to be inserted are as shown in the Figures below. Be careful that any mistake will lead to the damage of terminal.

How To Extract Crimp Terminal

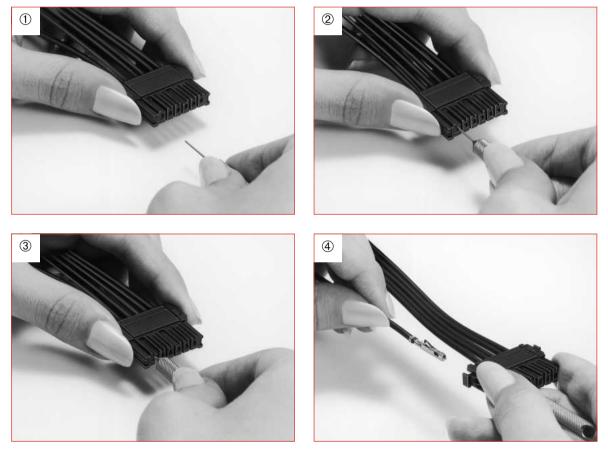

* Insert the jig top into the peak of convex section on terminal hole.



HIROSE ELECTRIC CO.,LTD.

5-23,OSAKI 5-CHOME,SHINAGAWA-KU,TOKYO 141-8587,JAPAN PHONE: 81-3-3491-9741, FAX: 81-3-3493-2933 http://www.hirose.com http://www.hirose-connectors.com