

8041

MAN 1000083983 EN Version: - Status: RL (released / freigegeben) printed: 14.08.2008

INSERTION MAGMETER FOR HIGH TEMPERATURES



Instruction Manual

burkert
Fluid Control Systems

Table of Contents

1	INTRODUCTION	3
1.1	Symbol used	3
1.2	General safety instructions	3
1.3	Description	4
1.4	Conversion of the flow velocity into a flow rate - Factor K	4
2	QUICK START	6
3	CONFIGURATION	8
3.1	General comments	8
3.2	Defining the mains frequency	11
3.3	Filtering level	11
3.4	“Zero flow” point calibration	12
3.5	Measuring range selection or full scale teach-in	13
3.5.1	Selection of a predefined measuring range	13
3.5.2	Full scale teach-in	14
3.6	Programming the relay output	15
3.6.1	Switching mode of the relay output	16
3.6.2	Programming the low switching threshold	18
3.6.3	Programming the high switching threshold	19
3.6.4	Programming the time-out before switching	20
4	INSTALLATION	21
4.1	Installation guidelines	21
4.1.1	Pressure-Temperature diagram	21
4.1.2	Mounting positions	22
4.2	Installation	24
4.3	General electrical connection	24
4.4	Electrical wiring	26
4.4.1	Connection of the 4-20 mA current output	27
4.4.2	Connection of the frequency output	28
4.4.3	Connection of the relay output	29
5	MAINTENANCE	30
5.1	Error signalling	30
5.2	Cleaning	31
6	TECHNICAL DATA	32
6.1	Process characteristics	32
6.2	Electrical characteristics	32
6.3	Safety	33
6.4	Environment	33
6.5	Conformity with standards	33
6.6	Dimensions	34
6.7	Label description	34
7	ANNEX	35
7.1	Order codes	35
7.1.1	Finished products	35
7.1.2	Accessories and spare parts	35
7.2	Flow charts	36
7.3	Connection examples	38

1.1 SYMBOL USED



Indicates information which must be followed. Failure to follow the information could endanger the user and affect the function of the device.

1.2 GENERAL SAFETY INSTRUCTIONS



Before installing or using this product, please read this manual and any other relevant documentation to ensure you fully benefit from all the advantages the product can offer.

- Please verify that the product is complete and free from any damage.
- It is the customer's responsibility to select an appropriate device for the application, ensure the unit is installed correctly, and maintain all components.
- Always check the chemical compatibility of the materials the device is made of.
- This product should only be installed or repaired according to the standards and rules in force in the country, by specialist staff using the correct tools.
- Please observe the relevant safety regulations throughout the operation, maintenance and repair of the product.
- Always ensure that the power supply is switched off and the pipes / tank do not contain any pressure before working on the device / system.
- If these instructions are ignored or the transmitter is not used according to the specifications, no liability will be accepted and the guarantee on the device and accessories will become invalid.
- This electronic device is sensitive to electrostatic discharge. To avoid any damage by immediate electrostatic discharge, pay attention to the requirements of EN 100 015-1.
- Always protect the device from electromagnetic perturbations, and when installed outside, protect it from the rain and ultraviolet radiations.

Manufacturer's address

Bürkert & Cie
Rue du Giessen
67220 TRIEMBACH-au-VAL
FRANCE

1.3 DESCRIPTION

The 8041 is a magmeter measuring a flow velocity and made up of an electronic module and a stainless steel sensor. It is fitted with a 4-20 mA current output, a pulse rate output and a relay output.

The flow velocity is visualized by a 10-led bargraph located on the electronic board.

The following parameters can be programmed by means of 5 switches, a push-button and a 10-led bargraph:

- "zero flow" point
- measuring full scale
- relay output parameters
- frequency delivered by the mains
- filtering of the flow velocity measurements

1.4 CONVERSION OF THE FLOW VELOCITY INTO A FLOW RATE - FACTOR K

The 8041 measures the flow velocity (in m/s) of the medium and converts it into a current (in mA) and a frequency rating (in Hz).

The current I or the frequency f are proportional to the flow rate Q (l/s); The proportionality factor is called "factor K":

$$f = K_1 \cdot Q$$

$$I = K_2 \cdot Q + 4$$

The following formulae make it possible to calculate the K factor which is necessary to convert the flow velocity, i.e. current or frequency value, into a flow rate:

Full scale	Factor K ₁	Factor K ₂
10 m/s	$K_1 = \frac{100}{K_{fitting}}$	$K_2 = \frac{20}{3 \times K_{fitting}}$
5 m/s	$K_1 = \frac{200}{K_{fitting}}$	$K_2 = \frac{40}{3 \times K_{fitting}}$
2 m/s	$K_1 = \frac{500}{K_{fitting}}$	$K_2 = \frac{100}{3 \times K_{fitting}}$

$K_{fitting}$ = K factor of the fitting S020 (to be taken from the instruction manual of the S020 fitting: use the K factor of the S020 associated to a transmitter 8045

MAN 1000083988EN Version: - Status: RL (released) Dr. rer. oec. Beberl. Printed: 14.08.2008

Example

Be a 8041 inserted into an S020, with DN50 and made of stainless steel:

$$K_{\text{fitting}} = 11,24$$

The selected full scale is 5 m/s.

The factor K_1 to be used for the conversion of the output frequency f into a flow rate Q is:

$$K_1 = \frac{200}{11,24} = 17,79$$


The factor K_2 to be used for the conversion of the output current I into a flow rate Q is:

$$K_2 = \frac{40}{3 \times 11,24} = 1,19$$

QUICK START


The Quick Start diagram shows the different installation and programming steps to be carried out to ensure the good operation of the appliance.

MAN 1000083983 EN Version: - Status: RL (released / freigegeben) printed: 14.08.2008

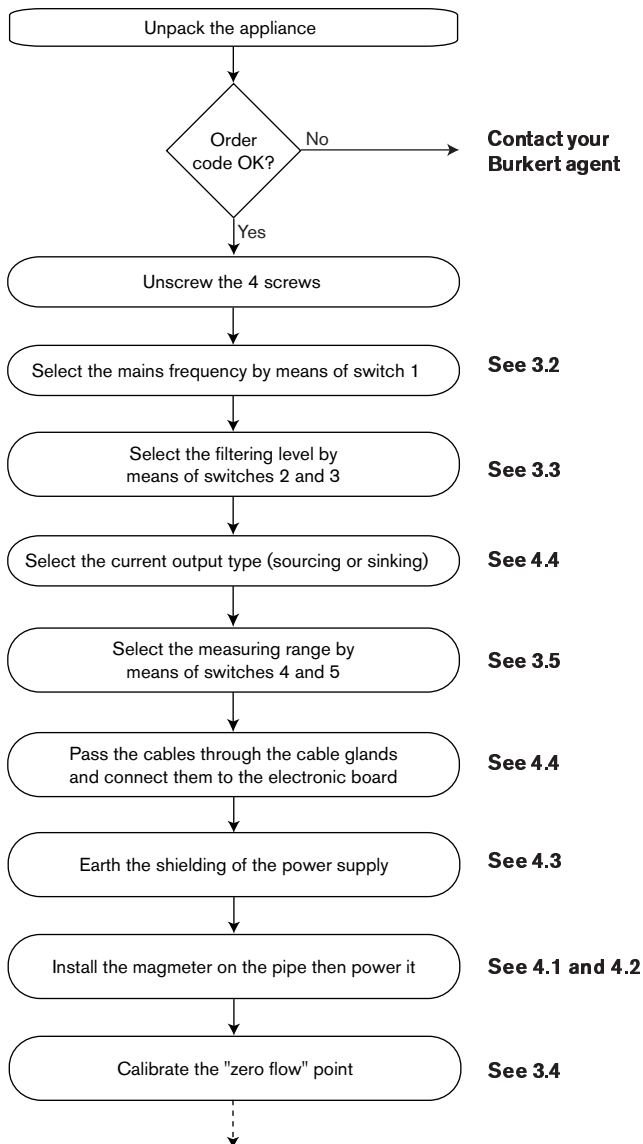

QUICK START

MAN 1000083983 EN Version: - Status: RL (released / freigegeben) printed: 14.08.2008

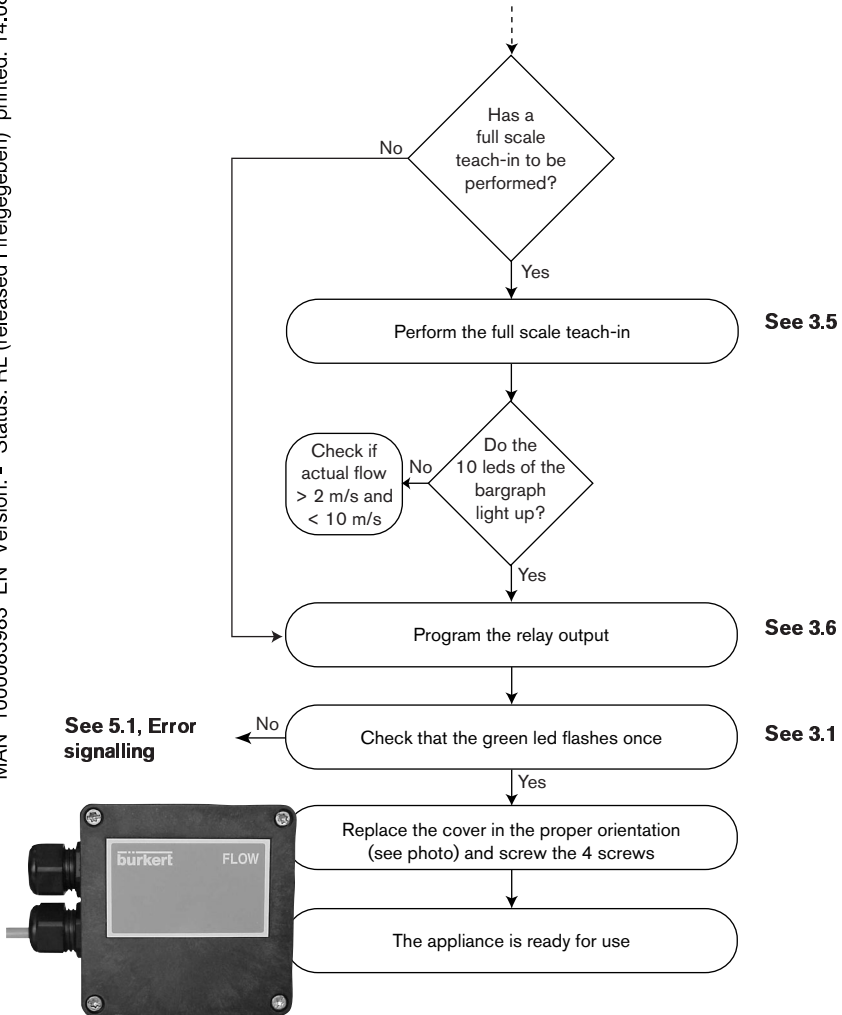


CONFIGURATION

3.1 GENERAL COMMENTS

The 8041 magmeter has 2 operating modes:

- The Readout mode: to visualize the measured flow velocity and the values programmed for the relay operation.
- The Configuration mode: to calibrate the device ("zero flow" point and measuring full scale) and program the relay parameters.

Configuration is done by means of accessible switches, push-button, leds and bargraph on the electronic board after having unscrewed the 4 screws and removed the cover of the magmeter.

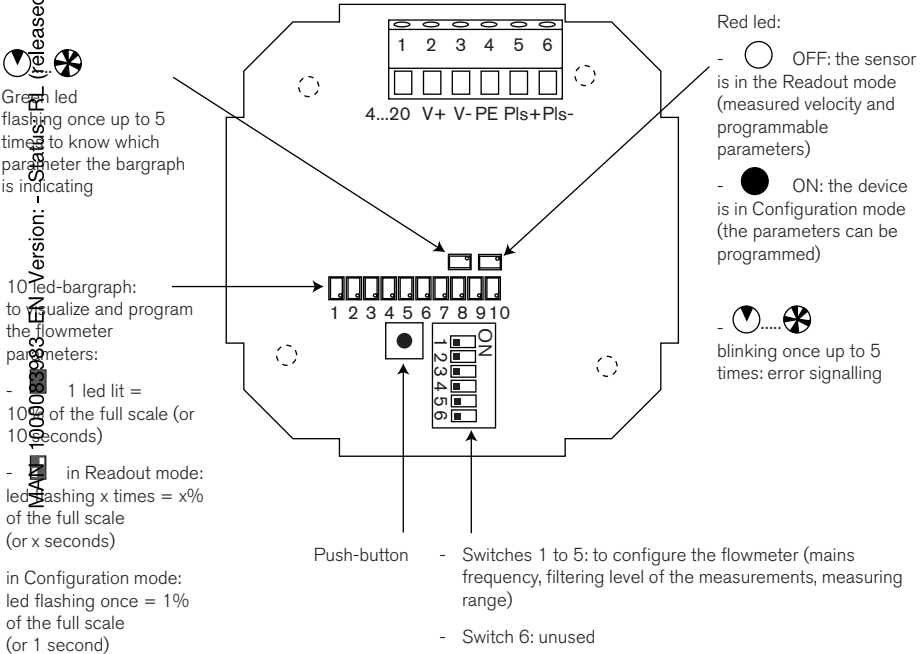

Always replace the cover as indicated by the photo opposite ; Screw the 4 screws in an alternating pattern.



CONFIGURATION

Example of a measured flow velocity visualized by the bargraph:


If the 0-10 m/s measuring range has been chosen, the following bargraph shows a measured flow velocity of 7.2 m/s (7 leds lit and the 8th led flashing twice = 72% of the full scale)



MAN_1000083983 EN Version: - Status: RL (released | freigegeben) printed: 14.08.2008

Reading mode

Configuration mode

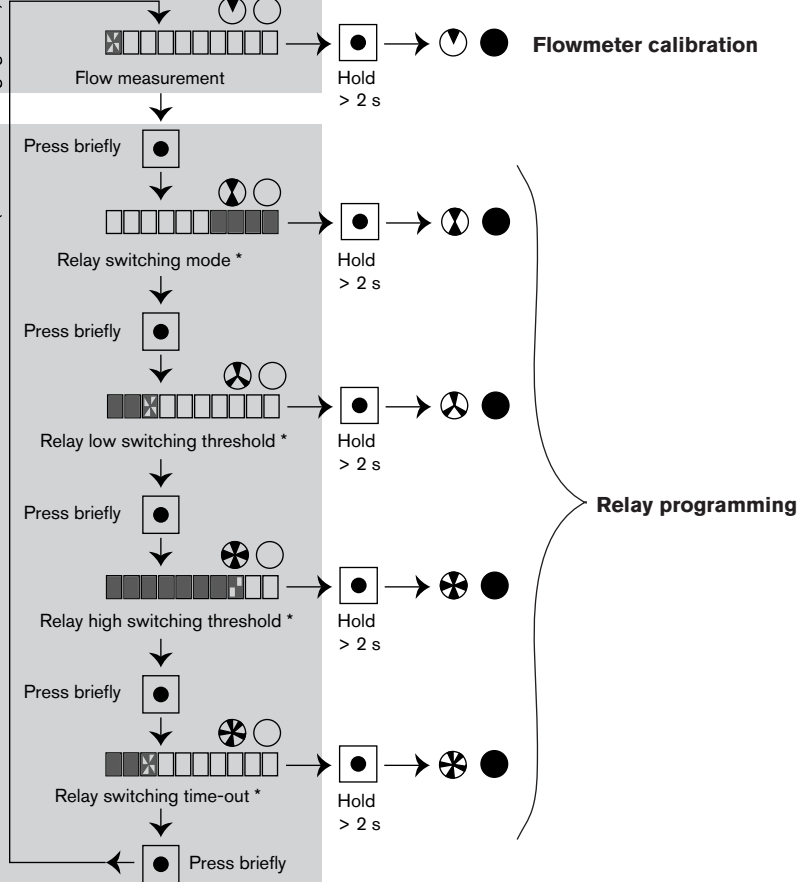


* The device automatically goes back to the reading mode of the flow velocity measurement, if the push-button is not pressed for 10 s.

	Push-button		Green led blinking 1 up to 5 times		Bargraph
			Red led off		Led off
			Red led lit		Led lit
					Led blinking

ENGLISH

CONFIGURATION

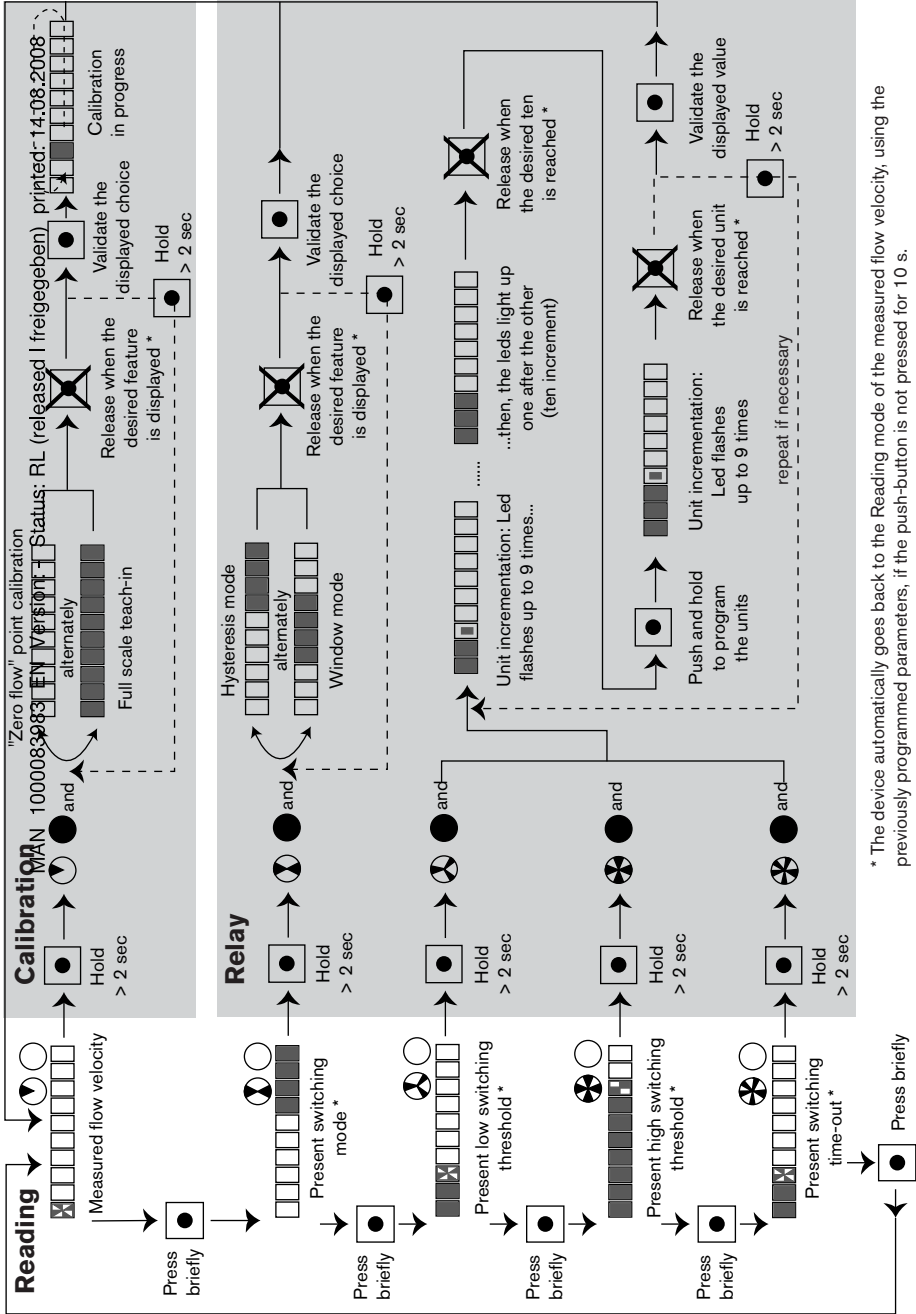

* The device automatically goes back to the Reading mode of the measured flow velocity, using the previously programmed parameters, if the push-button is not pressed for 10 s.

3.2 DEFINING THE MAINS FREQUENCY

Switch 1 makes it possible to select the frequency delivered by the mains:

Frequency of the power supplied by the network	Position of switch 1
50 Hz	OFF
60 Hz	ON

3.3 FILTERING LEVEL

Filtering allows the attenuation of fluctuations in the flow. The 8041 sensor can work without or with filtering.

Switch 2 makes it possible to activate or inhibit filtering :


Flow filtering activation	Position of switch 2
No	OFF
Yes	ON

If filtering has been activated, two filtering levels, slow or fast, are available through Switch 3:

Flow filtering	Position of switch 3
slow (10-90% response time = 14 s)	OFF
fast (10-90% response time = 5 s)	ON

MAN 1000083983 EN Version: - Status: RL (released/freigegeben) printed: 14.08.2008

- Slow filtering allows the smoothing out of strong variations in the flow (for example, fluid containing air bubbles)
- Fast filtering allows the smoothing out of weak variations in the flow.

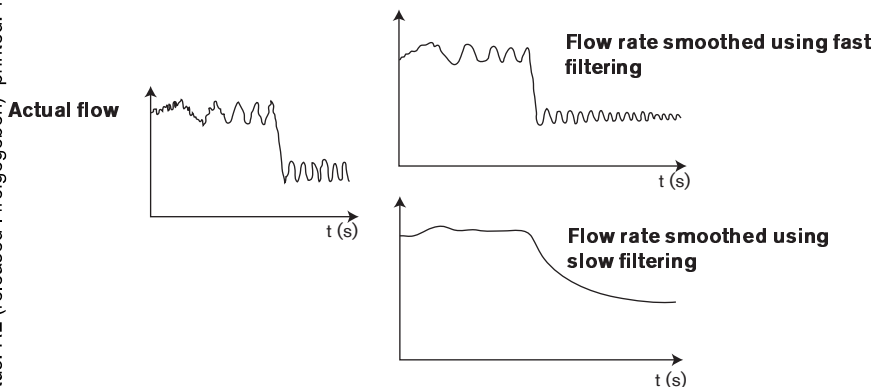

3.4 “ZERO FLOW” POINT CALIBRATION

Before using the sensor for the first time, its “zero flow” point must be calibrated.

- Fill the pipe with the fluid and then stop the flow.
- It is essential that the sensor be left in the fluid for 4 hours
- Ensure that there are no air bubbles in the pipe and that the fluid is immobile
- Check whether the green led flashes once and the red led is off (Readout mode). If not, refer to § 3.1
- Press and hold the push-button: after 2 seconds, the red led lights up (Configuration mode) and the bargraph shows the features “zero flow point calibration” and “full scale calibration” alternately.

Bargraph status

“zero flow” point calibration



Full scale calibration

- Release the push-button when the “zero flow” point calibration feature is displayed, then you may:

- ➔ either press the push-button briefly to validate the displayed feature. The magmeter is automatically calibrated.


At the end of calibration, the red led goes off: the magmeter has automatically returned to the flow velocity Readout mode.

- ➔ or press and hold the push-button to display another feature.
- ➔ or wait for 10 s to return to the measured flow velocity Readout mode, without validating the displayed feature.




If the red led flashes twice rapidly, the zero flow point could not be calibrated: press the push-button briefly. The sensor returns to the measured flow velocity Readout mode and uses the zero flow point of the previous calibration.

Bargraph status



“zero flow” point calibration



Calibration in progress

3.5 MEASURING RANGE SELECTION OR FULL SCALE TEACH-IN

3.5.1 Selection of a predefined measuring range


The output signal is proportional to the measured flow velocity. The measuring range may be adapted to the application by means of switches 4 and 5:

Measuring range	Position of switches 4 and 5	
	Switch 4	Switch 5
0 to 2 m/s	ON	OFF
0 to 5 m/s	OFF	ON
0 to 10 m/s	OFF	OFF
0 to full scale (between 2 and 10 m/s) determined by teach-in	ON	ON

When selecting a new measuring range, the percentages programmed for the low and high thresholds apply to the new selected full scale.

3.5.2 Full scale teach-in

The following curves show the ratio between the fluid velocity measured and the frequency or current value delivered by the output:

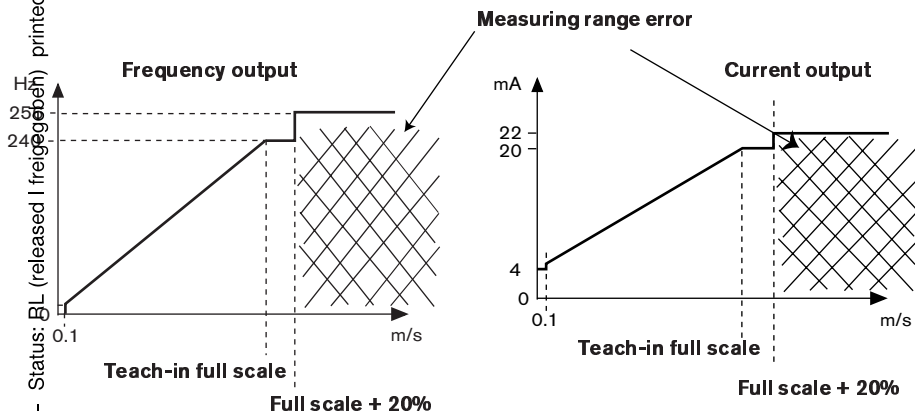


Bargraph status

If the predefined measuring range is suited to your application, the 8041 sensor can be programmed with the actual max. flow velocity of the application.

The minimal value of the measuring range is 0 m/s.

- Set both switches 4 and 5 to ON
- Install the 8041 sensor into the pipe (see chapter Installation)
- Let the max. flow flow through the pipe
- Check whether the green led flashes once and the red led is off (Readout mode). If not, refer to § 3.1
- Press and hold the push-button: after 2 seconds, the red led lights up (Configuration mode) and the bargraph shows the features "zero flow point calibration" and "full scale calibration" alternately.

"zero flow" point calibration



Full scale calibration

- Release the push-button when the “full scale calibration” feature is displayed, then you may:

- ➔ either press the push-button briefly to validate the displayed feature. The magmeter is automatically calibrated.

At the end of calibration, the red led goes off: the magmeter has automatically returned to the flow velocity Readout mode.


The teach-in full scale is saved by the electronics: it is used by the magmeter as soon as switches 4 and 5 are set to ON.

- ➔ or press and hold the push-button to display another feature.
- ➔ or wait for 10 s to return to the measured flow velocity Readout mode, without validating the displayed feature.

Bargraph status



Full scale calibration



Calibration in progress



If the red led flashes 4 resp. 5 times rapidly, the actual max. fluid velocity is resp. < 2 m/s or > 10 m/s. Press the push-button briefly: the sensor returns to flow velocity measurement using the full scale of the previous calibration.

3.6 PROGRAMMING THE RELAY OUTPUT

The user can program the following parameters for the operation of the sensor relay output:

- The switching mode, either window or hysteresis
- The low switching threshold, in a percentage of the full scale
- The high switching threshold, in a percentage of the full scale
- The time-out before switching, from 0 to 100 s.




Whether the relay operating is Normally Open or Normally Closed is determined by the connection of the relay to the terminals of the electronic board.

CONFIGURATION

ENGLISH



The following diagram shows switching examples of the relay output depending on the different possible parameter settings and the flow velocity:

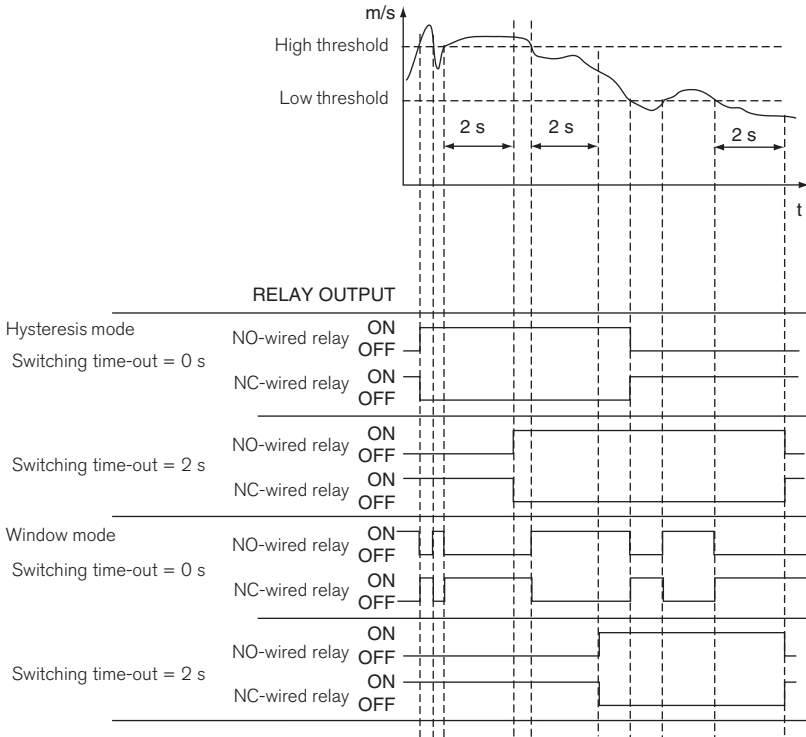



3.6.1 Switching mode of the relay output

The switching mode of the relay output can be chosen among 2 modes, either window or hysteresis.

- Window mode: the change of state of the relay output (OUT) occurs at any threshold detection:

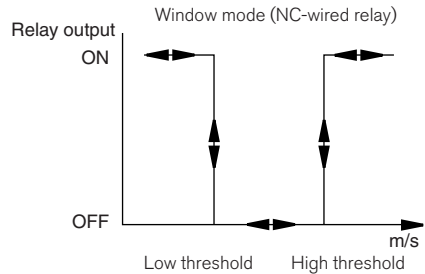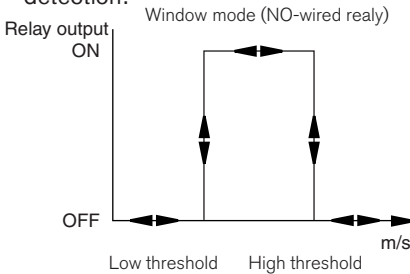

- Hysteresis mode: the change of state of the relay output (OUT) occurs at high threshold detection by increasing flow velocity and at low threshold detection by decreasing flow velocity:

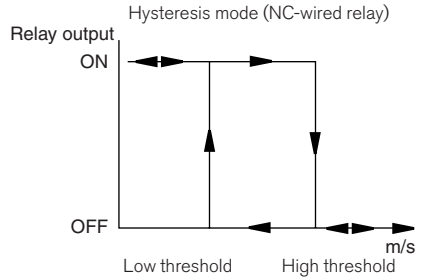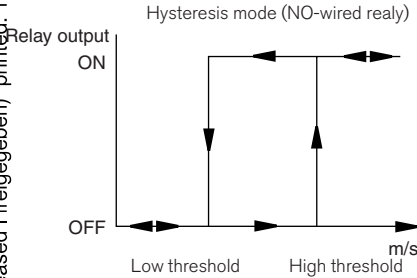

MAN 1000083983 EN Version: - Status: RL (released / freigegeben) printed: 14.08.2008

o change the relay switching mode, do as follows:

The green led flashes once and the red led is off (Readout mode). If not, refer to § 3.1

Press the push-button once briefly: the green led flashes twice and the bargraph shows the present switching mode.

Press and hold the push-button: after 2 seconds, the red led lights up (Configuration mode) and the bargraph shows the features "Hysteresis mode" and "Window mode" alternately.

- Release the push-button when the desired switching mode is displayed, then you may:

- ➔ either press the push-button briefly to validate the displayed feature and automatically return to the flow velocity Readout mode.
- ➔ or press and hold the push-button to display another feature.
- ➔ or wait for 10 s to return to the measured flow velocity Readout mode, without validating the displayed feature.


Bargraph status



Present measured flow velocity



Present switching mode
(Hysteresis mode, by default)



Bargraph status


3.6.2 Programming the low switching threshold

The low switching threshold can be programmed within a range between 0 and the high switching threshold



- The green led flashes once and the red led is off (Readout mode). If not, refer to § 3.1
- Press the push-button twice briefly: the green led flashes three times and the bargraph shows the present low threshold (in % of the full scale)
- Press and hold the push-button: after 2 seconds, the red led lights up (Configuration mode) and led N°1 of the bargraph flashes 9 times (1 flash = 1% of the full scale) then it lights up; the next leds then light up one after the other up to the high threshold;
- Release the push-button when the desired number of leds is lit (1 led lit = 10% of the full scale).
- Press and hold the push-button again: after 2 seconds, the next led flashes (1 flash = 1% of the full scale).
- Release the push-button when the led has flashed the desired times.
- If necessary, press and hold the push-button again to change the displayed value.
- Press the push-button briefly to validate the value visualized by the bargraph and automatically return to the flow velocity Readout mode or wait for 10 s to return to the flow velocity Readout mode without validating the displayed value.



Present measured flow velocity



Present low threshold (full scale by default)



2 Leds lit = 20% of the full scale
3rd Led flashing 4 times = 4% of the full scale

The bargraph shows 24% of the full scale, ie. by a 0-10 m/s measuring range, this corresponds to a low threshold of 2.4 m/s

3.6.3 Programming the high switching threshold

The high switching threshold can be programmed within a range between the low switching threshold value and 100% of the full scale.

The green led flashes once and the red led is off (Readout mode). If not, refer to § 3.1

Press the push-button 3 times briefly: the green led flashes four times and the bargraph shows the present high threshold (in % of the full scale)

Press and hold the push-button: after 2 seconds, the red led lights up (Configuration mode) and the first bargraph led following the low threshold value flashes 9 times (1 flash = 1% of the full scale) then it lights up; The next leds then light up one after the other up to 100%;




Release the push-button when the desired number of leds is lit (1 led lit = 10% of the full scale).

Press and hold the push-button again: after 2 seconds, the next led flashes (1 flash = 1% of the full scale). Release the push-button when the led has flashed the desired times.

If necessary, press and hold the push-button again to change the displayed value.

Press the push-button briefly to validate the value visualized by the bargraph and automatically return to the flow velocity Readout mode or wait for 10 s to return to the flow velocity Readout mode without validating the displayed value.

Bargraph status



8 leds lit = 80% of the full scale
9th Led flashing twice = 2% of the full scale

The bargraph shows 82% of the full scale, i.e. by a 0-10 m/s measuring range, this corresponds to a high threshold of 8.2 m/s

MAN 1000083983 EN Version: - Status: RL (released, freigegeben) printed: 14.08.2008

3.6.4 Programming the time-out before switching


If exceeded be the switching threshold of the relay output can be timed-out (from 0 up to 100 seconds), i.e. the switching only occurs when either threshold is exceeded for a duration higher than the time-out.

A time-out set to 0 means that the switching occurs immediately.


To set the time-out, do as follows:

- The green led flashes once and the red led is off (Readout mode). If not, refer to § 3.1
- Press the push-button four times briefly: the green led flashes five times and the bargraph shows the present time-out (in seconds).
- Press the push-button and hold: After 2 seconds the red led lights up (Configuration mode) and led N°1 of the bargraph flashes 9 times (1 flash = 1 s) then it lights up; the next leds then light up one after the other; release the push-button when the desired number of leds is lit (1 led lit = 10 s).
- Press and hold the push-button again: After 2 seconds the next led flashes (1 flash = 1 s). release the push-button when the desired flashing is reached.
- If necessary, press and hold the push-button again to change the displayed value.
- Press the push-button briefly to validate the value visualized by the bargraph and automatically return to the flow velocity Readout mode or wait for 10 s to return to the flow velocity Readout mode without validating the displayed value.


Bargraph status



Present measured flow velocity



Present switching time-out
(100 sec, by default)




5 leds lit = 50 sec
6th led flashing 2 times = 2 seconds

The bargraph shows a time-out of 52 seconds

4.1 INSTALLATION GUIDELINES

4.1.1 Pressure-Temperature diagram

Please be aware of the fluid pressure-temperature dependence according to the respective fitting+sensor material as shown in the diagram below:

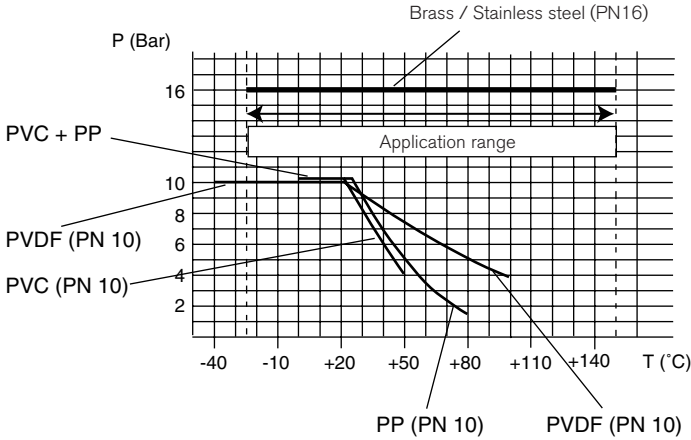


- The device must be protected against the rain, constant heat radiation and other environmental influences such as magnetic fields or direct exposure to sunlight.
- Ensure the device is not located near any large machinery which may interfere with the transmitter as this can have an effect on the measurements.
- Dismounting precautions: All precautions must be taken before removing the transmitter from the pipe depending on the process used as the pipe may contain dangerous/agressive hot fluids or fluids with high temperatures or pressures.




4.1.2 Mounting positions

The transmitter can be mounted in the following ways to obtain an accurate flow measurement although the piping should be designed to ensure that the pipe is maintained full at all times to avoid inaccurate measurement.

Mounting horizontally

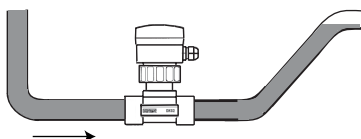


Correct

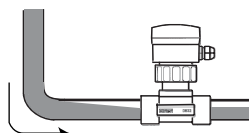


Incorrect

Mounting vertically

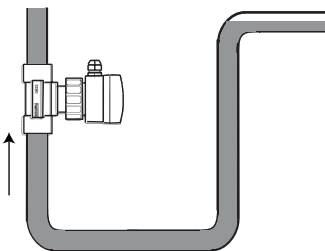

Correct

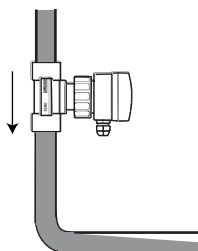


Incorrect




- When mounting vertically ensure that the flow direction is in an upward direction as indicated by the arrow.
- Always mount the transmitter upstream a possible injection point in the pipe of a high conductivity product (acid, base, saline,...).

It is advisable to mount the transmitter at a 45° angle to the horizontal centre of the pipe as shown in the diagram to avoid having deposits on the electrodes and false measurements due to air bubbles.

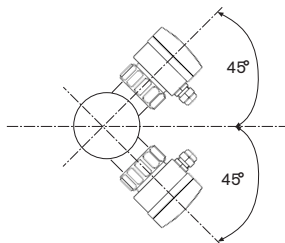


INSTALLATION

The minimum straight upstream ($10 \times \text{DN}$) and downstream ($3 \times \text{DN}$) distances must be observed.

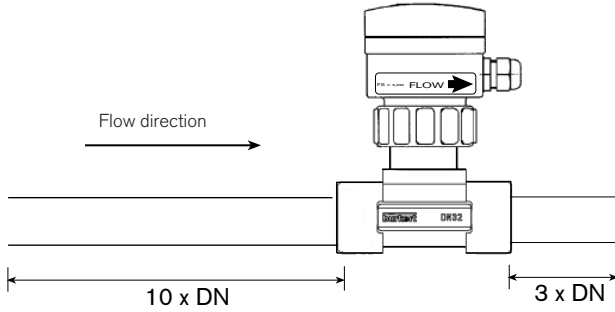

Please ensure the pipe design does not allow the build up of air bubbles or cavities within the medium as this will cause measuring errors.

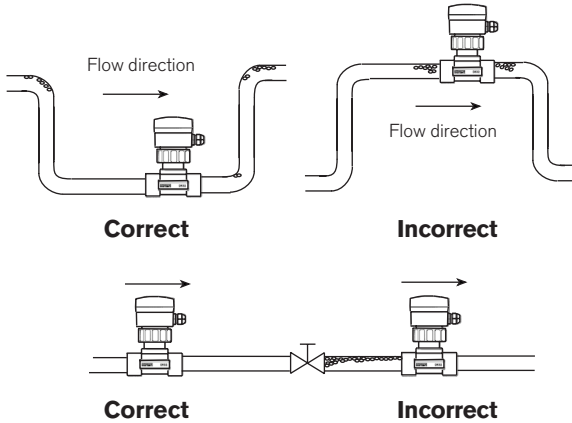


4.2 INSTALLATION

The device can be installed into pipes using our special fitting system S020.

The fitting **4** must be installed into the pipe according to the installation guidelines within section 4.1. Then:

- Insert the plastic nut **3** onto the fitting **4** and snap the plastic ring **2** into the guide bush **5**.
- Insert the sensor into the fitting ensuring the arrow on the side of the housing indicates the flow direction and ensuring the cable glands show the downstream direction and the alignment of the electrodes is perpendicular to the flow direction.

 **The plastic nut must only be tightened by hand!**

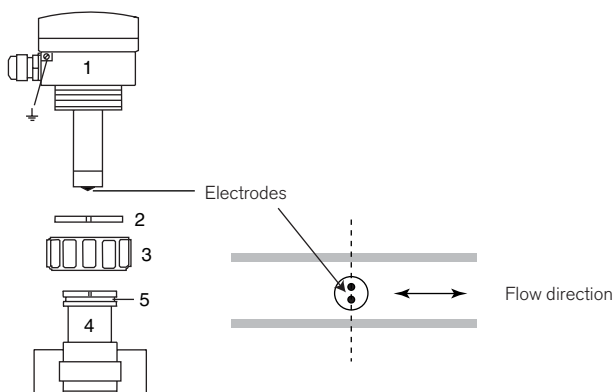

4.3 GENERAL ELECTRICAL CONNECTION

- Use cables with a temperature limit of 105°C minimum.
- For normal operating conditions the measuring signal can be transmitted by a shielded cable of 0.75 mm² cross section.
- The cable must not be installed in combination with carrying lines with a higher voltage or frequency.

INSTALLATION

- If a combined installation cannot be avoided, a minimum space of 30 cm (1 ft) should be respected.

The cable diameter must be between 6 and 12 mm;

If 2 cables are needed, use the supplied multiway seal and 4-mm diameter cables.

The power supply must be regulated.

Ensure the equipotentiality of the installation (power supply - transmitter - fluid):

- ◆ The various earth spots in the installation have to be connected together to eliminate the potential differences that may occur between different earthes.
- ◆ Observe faultless grounding of the shield at both ends of the cable.
- ◆ Earth the negative terminal of the power supply to suppress the common mode currents. If direct earthing is not possible insert a 100 nF/50 V-condensator between the negative terminal and the earth. Special attention has to be paid if the transmitter is installed on plastic pipes because there is no direct earthing possible.


Proper earthing is performed by earthing together the metallic devices such as pumps or valves, that are as close as possible to the magmeter. If no such devices are present, insert metallic piping parts (earthing rings, not supplied) into the plastic pipes before and after the magmeter and earth them together.

The earthing rings must be in contact with the fluid.



Inside of the housing: Connect the shielding to the earth.

Take care not to completely untighten the screw. Insert the shielding. Retighten screw.

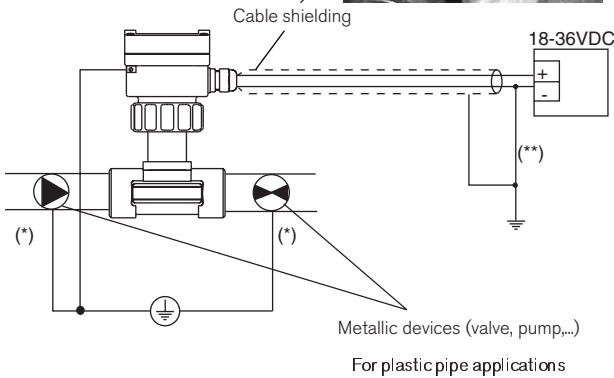

(*) or metallic parts, inserted inside the pipe.


(**) If direct earthing is impossible, connect a 100 nF/50 V-condensator between the negative terminal of the power supply and the earth.



- Do not wire the magmeter with the power supply connected.
- It is advisable to put security devices on:
Power supply: Fuse (300 mA) and an interrupter
Relay: 3A max. fuse and circuit breaker (depending on application)
- Do not apply both a dangerous voltage and a very low safety voltage to the relay

4. ELECTRICAL WIRING

Remove the cover via the 4 screws on the top of the magmeter to access the electronic board, pull the cables through the cable glands and wire according one of the following diagrams.

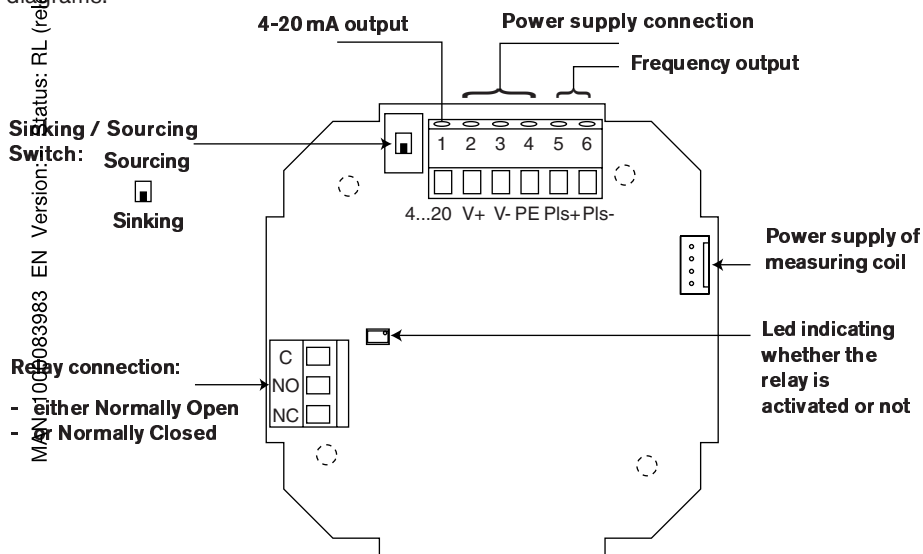

If only one cable gland is used, seal the unused cable gland using the supplied obstructor to ensure the tightness of the magmeter. Unscrew the cable gland nut, insert the obstructor and screw the nut back onto the cable gland.



Always replace the cover as indicated by the photo opposite ; Screw the 4 screws in an alternating pattern.



Status: RL (released) printed: 14.08.2018
 Version: EN Version: 083983
 M...

INSTALLATION

4.4.1 Connection of the 4-20 mA current output

The current output can be connected to an external device (PLC,...) with either sourcing or sinking 4-20 mA entry.




Set the Sourcing/sinking switch to the desired position by power off.

MAN 1000083983 EN Version: - Status: PL (released | freigegeben) printed: 14.08.2008


ENGLISH

Switch set to sourcing mode

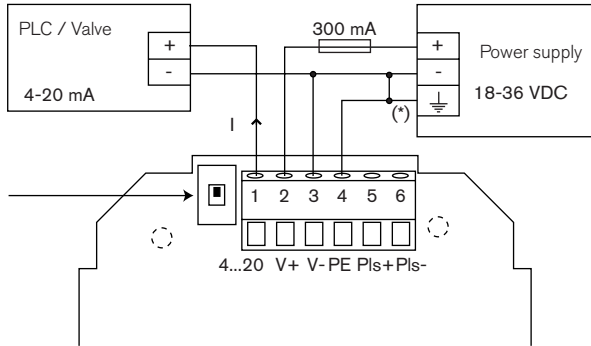

Connection in sourcing mode

Switch set to sinking mode

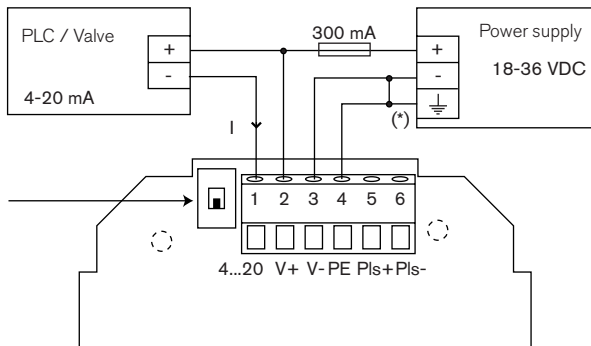


Connection in sinking mode

(*) If direct earthing is impossible, connect a 100 nF/50 V-condensator between the negative terminal of the power supply and the earth.


4.4.2 Connection of the frequency output

The frequency output may be connected to a programming logic controller (PLC) or a counter.

Connection to a PLC is done on the basis of the following diagrams:

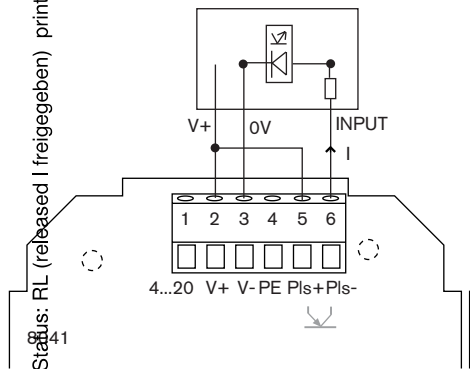


Connection to a PLC with common - (PNP)

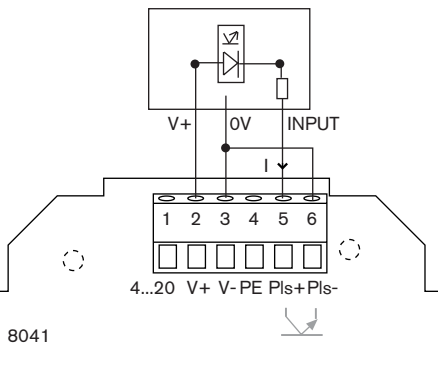


Connection to a PLC with common + (NPN)

Connection of a load is done on the basis of the following diagrams:

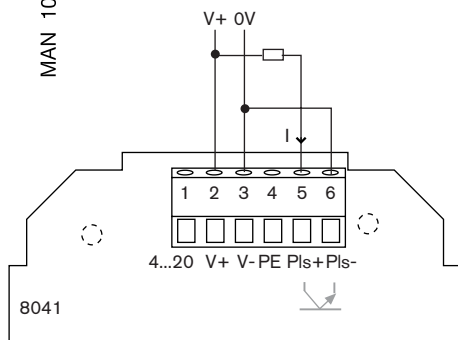

Connection to an electro-mechanical counter or relay

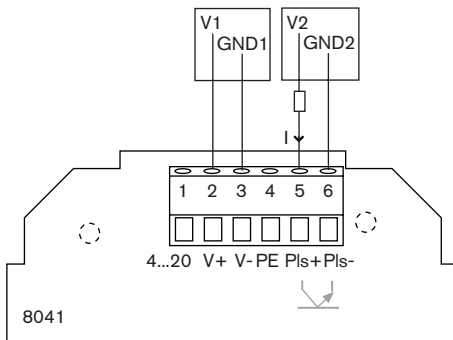



Connection to an electronic counter with powered input

4.4.3 Connection of the relay output


MAN 1000083983 EN Version: - Status: RL (released / freigegeben) printed: 14.08.2008

The relay output can operate either in a Normally Open or Normally Closed configuration depending on the wiring to the 8041 electronic board.

Normally Open Connection of the relay

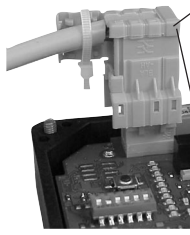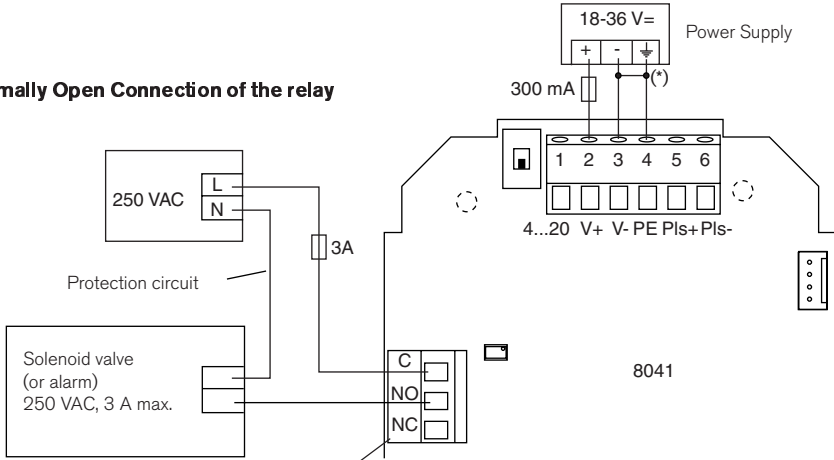

Relay protection cap

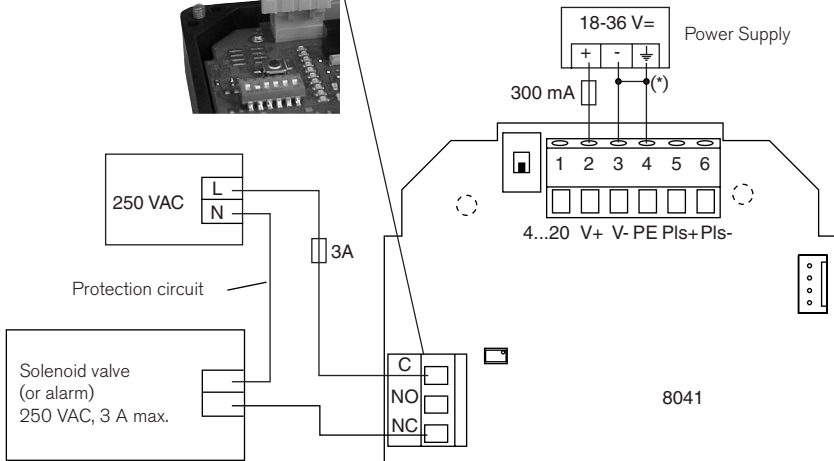

Normally Closed Connection of the relay

(*) If direct earthing is impossible, connect a 100 nF/50 V-condensator between the negative terminal of the power supply and the earth.

5.1 ERROR SIGNALLING

An error is indicated by special flashing of the red led.

MAN_1000083983_EN_Version:-- Status:PL (released+freigegeben) printed: 14.08.2008

What happens ?	Bargraph status	Red LED status	Current or Frequency output indication	Possible cause	Do the following	See also
The sensor does not work				The sensor is not connected	Connect the sensor	4.4
	OFF	OFF	0 mA and 0 Hz	The fuse of the installation is in a bad condition The switch of the installation is set to OFF The power supply has been wrong connected to the + and - terminals	Change the fuse Set the switch to ON Check the wiring	-- -- 4.4
The flow measurements are not stable				The power supply is not stable The sensor is out of service The electrodes are dirty	Change the power supply Send the device back to Burkert Clean the sensor electrodes	-- -- 5.2
	Unstable	OFF	> 4 mA and > 0 Hz	The electrodes are not in contact with the fluid Air bubbles appear within the fluid	Ensure the electrodes are always in contact with the fluid Follow the mounting instructions Select the "slow" filtering	4.1 4.1.2 3.3
The sensor does not measure a nil flow				The flow fluctuations are very important Upstream-downstream connection has not been performed properly	Follow the calibration procedure Select the "slow" filtering (switch 3)	3.4 3.3
	ON	OFF	> 4 mA and > 0 Hz	The "zero flow" point has not been calibrated correctly	Perform a correct upstream-downstream connection Perform a new calibration	4.1.2 3.4

MAN_1000083983_EN_Version: - Status: RL (released / freigegeben) _printed: 14.08.2008

What happens ?	Bargraph status	Red LED status	Current or Frequency output indication	Possible cause	Do the following	See also
Wrong flow rate measurements	-	OFF	-	The K factor has not been calculated correctly	Recalculate the K factor	1, 4
	all leds lit	OFF	20 mA and 240 Hz	Measuring range exceeded by less than 20%	Select the next measuring range	3, 5
The sensor transmits no current or no frequency at all	ON	OFF	0 mA and/or 0 Hz	The sourcing / sinking switch has not been set correctly	Modify the sourcing/sinking switch	4.4.1
	OFF	OFF	22 mA and 256 Hz	The outputs are not connected properly	Re-connect the outputs	4.4
The sensor is stopped - an error is indicated	Flashes once briefly every 2 s	Flashes once briefly every 2 s	22 mA and 256 Hz	Measuring range exceeded by more than 20%	Press the push-button briefly. Select the next measuring range	3, 5
	Flashes twice briefly every 2 s	Flashes twice briefly every 2 s	22 mA and 0 Hz	The "zero flow" point calibration failed	See the flow-velocity-DN diagrams Press the push-button briefly. Perform a new calibration	7, 2
	Flashes 3 times briefly every 2 s	Flashes 3 times briefly every 2 s	22 mA and 0 Hz	The sensor is out of service	Send the device back to Burkert.	3, 4
	Flashes 4 times briefly every 2 s	Flashes 4 times briefly every 2 s	22 mA and 0 Hz	The full scale teach-in failed because the fluid velocity < 2 m/s	Check the upstream-downstream connection If the error persists, send the device back to Burkert.	4.1.2
	Flashes 5 times briefly every 2 s	Flashes 5 times briefly every 2 s	22 mA and 0 Hz	The full scale teach-in failed because the fluid velocity > 10 m/s	Perform a new teach-in or choose a predefined measuring range	--

5.2 CLEANING

The 8041 sensor may be cleaned with water or a product which is compatible with the materials therein. Your Burkert supplier is available to provide you with any additional information you require.

SPECIFICATIONS

6.1 PROCESS CHARACTERISTICS

Flow measurement

- Type of measurement Electromagnetic measurement
- Measuring range 0,1 to 10 m/s
- Linearity +/- (1% of the M.V. + 0.1% of the full scale)
- Repeatability 0.25% of the M.V.
- Accuracy +/-2% of the M.V., with calibration on site (for ex. teach-in with a 8025 transmitter)
- (for M.V. from 1 to 10 m/s +/-4% of the M.V., with standard K factor*.)
- (fluid -20 °C < T° < 130 °C)

* In the reference conditions, where: fluid = water, water and ambient temperatures = 20 °C, upstream and downstream distances complied with, pipe dimensions adapted.

M.V. = measured value

General data

- Current output refresh rate 100 ms
- Pressure class Depends on the temperature and fitting material (see 4.1.1)
- Fluid temperature -20 °C up to 150 °C
- Minimum fluid conductivity 20 µS/cm
- Materials in contact with the fluid Finger: stainless steel 316L (DIN 1.4404) and PEEK
Seals: EPDM (KTW agreement)

6.2 ELECTRICAL CHARACTERISTICS

Pulse rate output

- Output type Frequency output from 0 to 240 Hz (256 Hz for error signalling), Duty cycle = 50% +/-1%
- Max current 100 mA (protected against short-circuits and polarity reversals)

Current output

- Output type Current output from 4 to 20 mA (22 mA for error signalling)
- Electrical wiring sourcing or sinking mode

Relay output

Output type	Normally Open or Normally Closed, depending on wiring 250 VAC, 3A
-------------	--

Electrical connection

Power supply voltage	18 to 36 VDC, regulated
Maximum current consumption	220 mA

6.3 SAFETY

- Wiring protected against polarity reversal
- User parameters saved in EEPROM

6.4 ENVIRONMENT

Operating and storage ambient temperatures	0 to 60 °C
Operating and storage humidity rating	< 80%, non condensated
Housing and cover material	PPA, glass fiber reinforced
Protection rating	IP65

6.5 CONFORMITY WITH STANDARDS

Emission	EN 50081.1
Protection	EN 61000-6-2
- Safety	EN 61010-1
- Vibration	CEI 68-2-6
- Shock	CEI 68-2-27

- The device also complies with directive N° 97/23/EC about the devices set under pressure, according to the following methods:
 - Fluids of group 1 according to §1.3b of the directive: $PN \leq 16$ bar and $DN < 125$
 - Fluids of group 2 according to §1.3b of the directive: $PN \leq 16$ bar and $DN \leq 200$

It has been designed and manufactured professionally (Article 3.3).

The CE mark is not for pressure.



The CE mark complies with directives 89/336/EC (EMC) and 73/23/EC (LVD).

SPECIFICATIONS


ENGLISH

6.6 DIMENSIONS

MAN 1000083983 EINN Version: 1.08.2008 Status: PL (released for release)

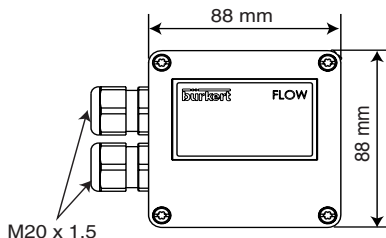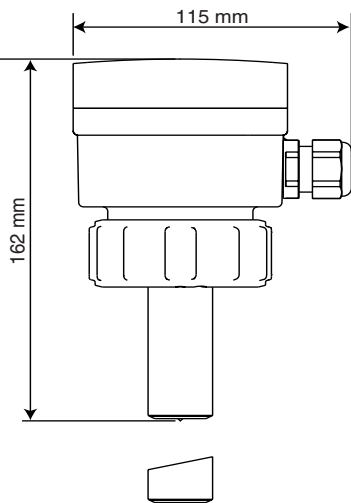

6 LABEL DESCRIPTION

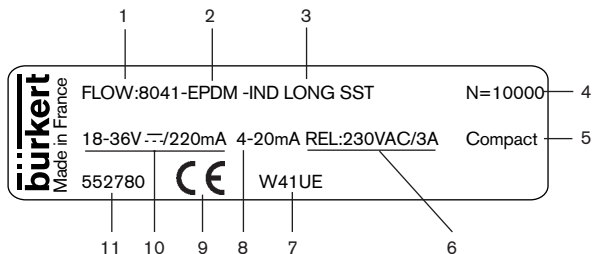

1. Type of magmeter
2. Gasket material
3. Sensor characteristics
4. Serial number
5. Version of the magmeter
6. Relay data
7. Manufacturer code
8. Current output
9. CE logo
10. Power supply / Max. consumption
11. Order code

7.1 ORDER CODES

7.1.1 Finished products

- 552779: 8041 with 1 short stainless steel sensor, 1 current output, 1 frequency output, 1 relay output, 2 M20 x 1.5 mm cable glands
 + 1 set including 1 cable gland obturator, 1 cable gland 2x6 mm multiway seal, 1 black EPDM gasket for the sensor, 1 mounting instruction sheet
 + 1 relay connection kit
- 552780: 8041 with 1 long stainless steel sensor, 1 current output, 1 frequency output, 1 relay output, 2 M20 x 1.5 mm cable glands
 + 1 set including 1 cable gland obturator, 1 cable gland 2x6 mm multiway seal, 1 black EPDM gasket for the sensor, 1 mounting instruction sheet
 + 1 relay connection kit

7.1.2 Accessories and spare parts

Designation	Order code
Set including 2 cable glands M20x1.5 + 2 neoprene flat seals for cable gland or plug + 2 screw-plugs M20x1.5 + 2 multiway seals 2x6 mm	449755
Set including 2 reductions M20x1.5 / NPT1/2" + 2 neoprene flat seals for cable gland or plug + 2 screw-plugs M20x1.5	551782
Set including 1 cable gland obturator M20x1.5 + 1 multiway seals 2x6 mm for cable gland or plug + 1 black EPDM gasket for the sensor + 1 mounting instruction sheet	551775
Ring	619205
PPA nut	440229
Set including 1 green FPM + 1 black EPDM gasket	552111
Relay connection kit including 1 screw terminal strip + 1 protection cap + 1 Rilsan + 1 mounting instruction sheet	552812


MAN 1000083983 EN Version: - Status: RL (released / freigegeben) printed: 14.08.2008

7.2 FLOW CHARTS

ENGLISH

These charts make it possible to choose the best suited fitting diameter depending on the application flow rate and velocity.

MAN 1000083983 EN Version: - Status: RL (released / freigegeben) printed: 14.08.2008

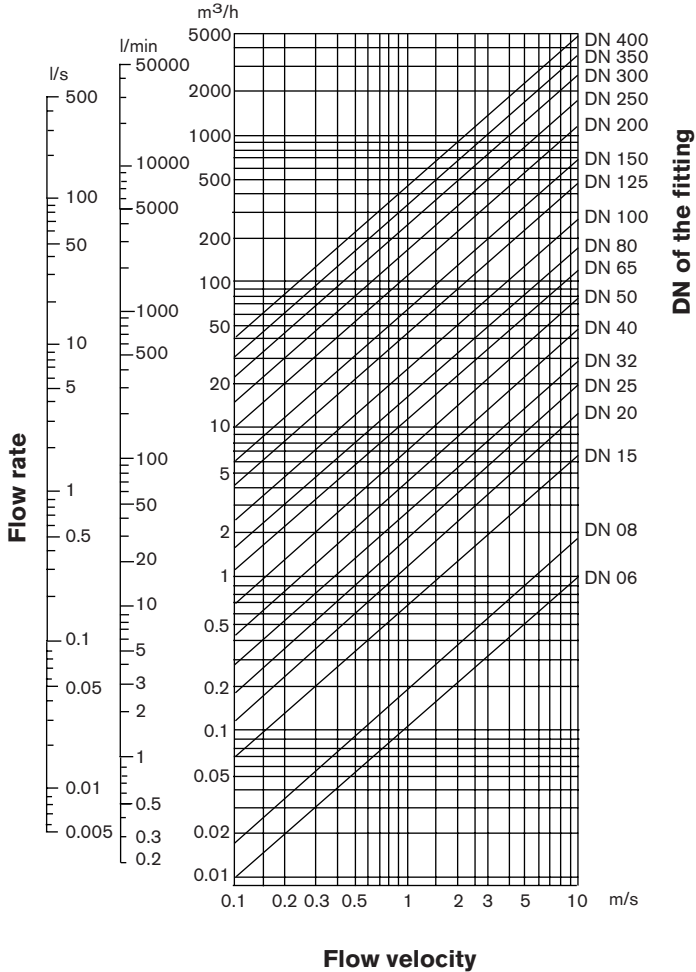


Selection example:

Nominal flow rate = 10 m³/h

Ideal flow velocity = 2-3 m/s

=> As defined by the flow chart the required fitting diameter is DN40.

MAN 1000083983 EN Version: - Status: RL (released / freigegeben) printed: 14.08.2008

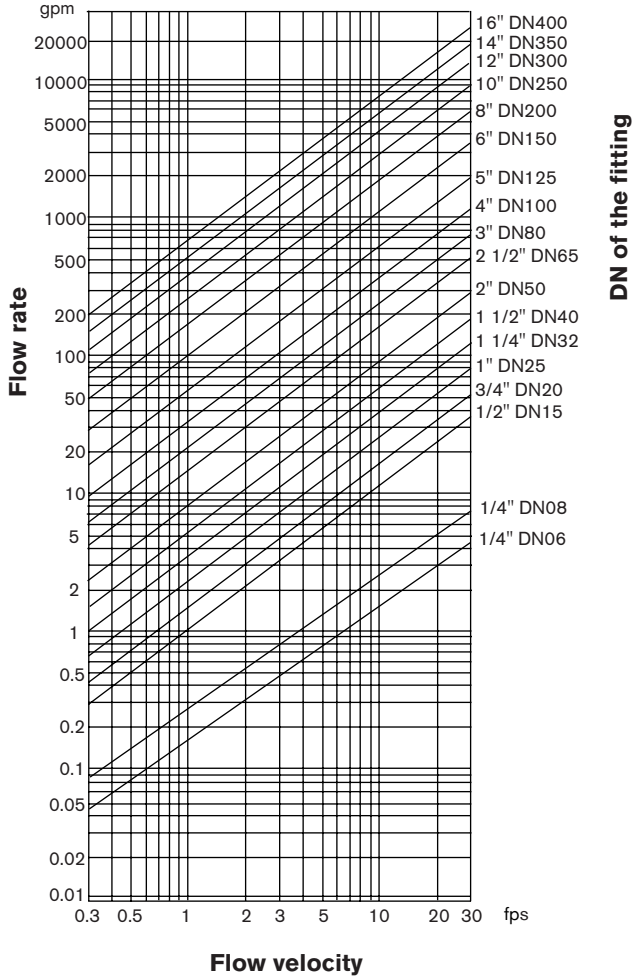

Selection example:


Nominal flow rate = 50 gpm
 Ideal flow velocity = 8 fps

=> As defined by the flow chart the required fitting diameter is 1"1/2.

7.3 CONNECTION EXAMPLES

Between the 8041 magmeter and the flow transmitter 8025, Low Flow or Batch, in a panel version.

On a panel version of the 8025 Low Flow, set SW100 to position 1 and SW101 to position 3.

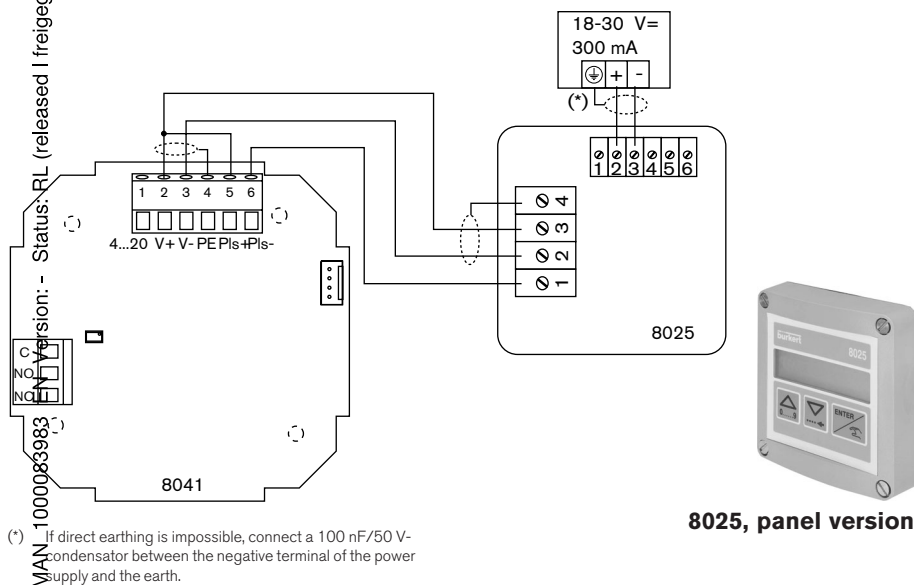


Order codes of the 8025, Low Flow or Batch which can be connected to the 8041


8025	Technical data		Order code
L O W	Panel version 18-30 VDC	with relays	419537
		without relay	419538
F L O W	Wall-mounted version 18-30 VDC	with relays	419540
		without relay	419541
	Wall-mounted version 115/230 VAC	without relay	419544
B A T C H	Panel version 18-30 VDC	with relays	419536
		Wall-mounted version 18-30 VDC	with relays

Between the 8041 magmeter and the positioner 1067 mounted on a diaphragm valve

MAN 1000083989 EN Version: - Status: RL (released / freigegeben) printed: 14.08.2008

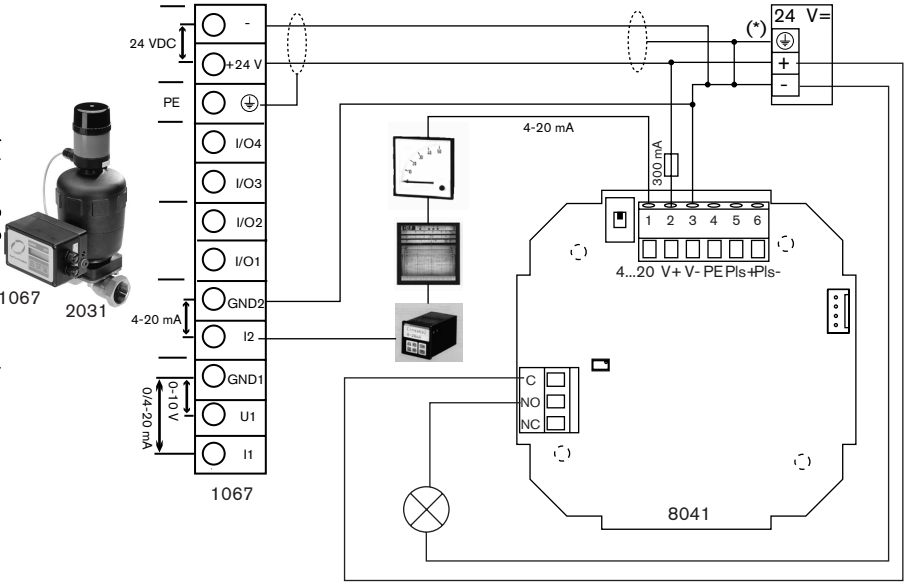

Between the 8041 magmeter and the TopControl 8631 mounted on a diaphragm valve

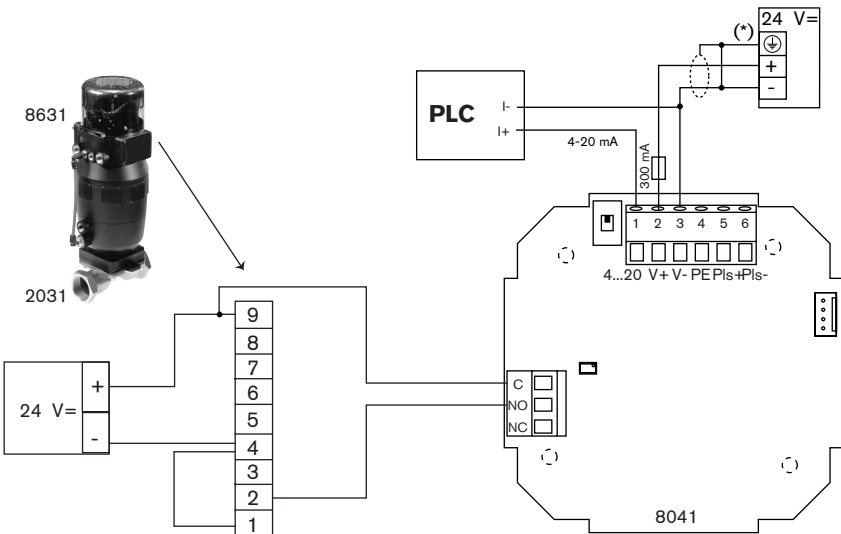

(*) If direct earthing is impossible, connect a 100 nF/50 V-capacitor between the negative terminal of the power supply and the earth.

MAN 1000083983 EN Version: - Status: RL (released / freigegeben) printed: 14.08.2008